 


User Manual

Wooden Bluetooth Speaker Radio

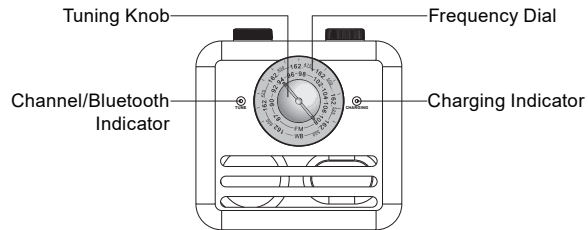

CONTENTS:


- RADIO OPERATION
- BLUETOOTH SPEAKER
- USB CHARGING
- RECHARGEABLE LI-ION BATTERY
- WARRANGTY
- SPECIFICATIONS
- SAFETY INSTRUCTIONS

RADIO OPERATIONS

FM/WB

- Turn the power switch to the “ON” position at the back of the unit.
- Select FM/WB with tuning knob, extend the antenna to get better signal.
- Rotate the tuning knob to select a channel, channel indicator stays red when a channel is properly selected.


NOTE: Please be gentle with the tuning knob and FM/WB band selector, thanks.

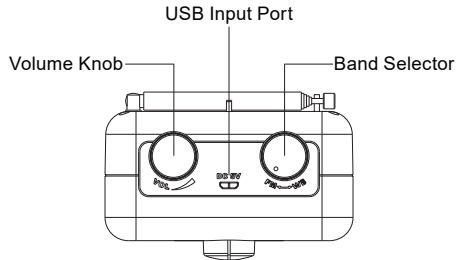

BLUETOOTH SPEAKER

- Turn the power switch to “ BT ”
- A pair of beeps will be heard after 3s. At the same time, the Bluetooth indicator will flash.
- Turn on the Bluetooth device such as a mobile phone to find the name of “MD-050” and click it to connect.
- When is connected, there will be a beep and the indicator will stay blue,open the music player to listen to music. Then the indicator will flash.
- After disconnected the Bluetooth, there will be a beep and the Bluetooth indicator will flash.

NOTE: To ensure the sound quality of Bluetooth, the best reception distance is within 10 meters.

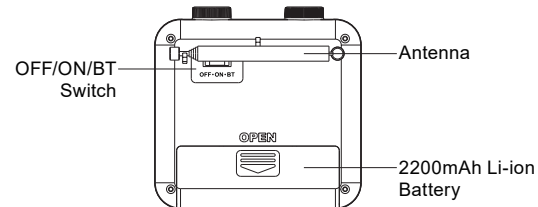

USB CHARGING

- To charge the radio, insert the supplied USB cable to the power source.
- The charging indicator will stay red. After fully charged, the red light will turn off.
- It takes 8 hours for the internal 18650 2200mAh battery to be fully charged.
- When completely charged, the battery will deliver 9 hours of radio play (depending on the volume) or 8 hours of Bluetooth speaker time.

RECHARGEABLE LI-ION BATTERY

- Remove battery compartment cover (at the back) insert 2200mAh Li-ion battery. Ensure the negative (-) end is placed against the spring.
- The Li-ion battery can be replaced if the battery is completely drained.

WARRANTY

- This wooden radio has full 12-month warranty against manufacturing defects.
- The warranty period begins from the date of purchase.

SPECIFICATIONS

Frequency range	FM 87-108MHz WB 162.400-162.550MHz
Dimensions	97x96.5x66mm/38.1x38x26in
Weight	245g/0.54lb
Product material	Wood,PVC
Power consumption	2W (max)
Working voltage	2.7V-4.2V
Output voltage/current	5V/ 600mA
Speaker	Φ40mm/8Ω/3W
Bluetooth	Bluetooth 4.2
Transmission distance	≤10 meters
Power source	3.7V/ 2200mAh 18650 Li-ion

SAFETY INSTRUCTIONS

- Dropping this radio can cause injury or damage. The unit will not resist strong impact or contact with corrosive liquids.
- This radio is not waterproof. Keep this unit dry but stay away from direct sunlight, high temperature.
- Do not rub against chemical fiber, silk or other electricity products which will make static easily.
- When cleaning the case, wipe with a soft cloth and detergent solution. Do not use strong solvents such as alcohol, benzene or thinner.

User Manual

Wooden Bluetooth Speaker Radio

