

Troubleshoots:

FM RADIO Not receiving signal:

1. Pull Antenna fully out
2. Try different location in your place to see if you get better reception
3. Turn Off LED lights in the Room as signal interferes many times with LED Lights
4. Turn Off all Bluetooth device in Room

USB / TF Card Not working

1. Make sure Radio is fully charged
2. Do not use USB/TF Card more than 32 GB
3. Do not use any other format of files in your USB/TF other than Mp3

In the Box:

- Radio with Battery inserted
- Power Adapter
- Charging Cable
- User Manual

Key Features:

- FM/AM/SW Radio
- Manual Tuning Radio
- Bluetooth V5.0
- USB & TF Card Support for Mp3 Music
- Earphone Port
- Rechargeable Battery
- Torch
- DC-5V
- 5 Watts Speaker
- USB Output for emergency charging of Mobile

Specifications

- FM Radio Band: 87-108mHz
- AM Radio band: 530-1600KHz
- SW Radio Band: 8.0-18.0Mhz
- Bluetooth Distance <10m
- Sound Output 5 Watts
- Product Dimensions:
- Battery: Rechargeable 3.7V/ 1500mAh 18650 Li-ion
- Battery Backup: 8-10 Hours for Radio. Upto 4 Hours for USB/ TF/ Bluetooth Playback
- Power: 5V-DC



**REGISTER YOUR
PRODUCT ONLINE**
FOR HASSLE-FREE WARRANTY REPAIR



Register at :

melodymedia.in/product-registration



For any Support contact us on:

Tel: 080-23492250
WhatsApp / Mob: +91 6363772699
Email: support@melodymedia.in
Website: www.melodymedia.in



Model No. R-917



Quick User Guide

 
Portable Rechargeable Radio

For any Support contact us on:


Tel: 080-23492250 | WhatsApp / Mob: +91 6363772699
Email: support@melodymedia.in | Website: www.melodymedia.in

Functional Description


Front

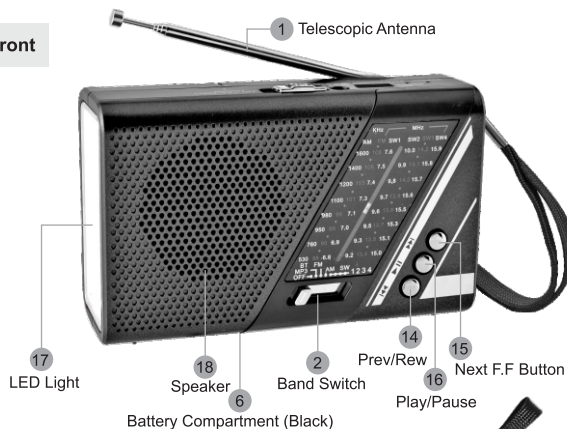

Top

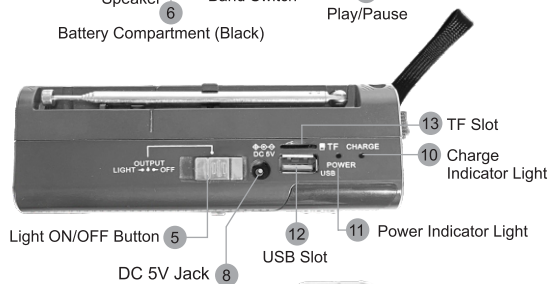 

Side

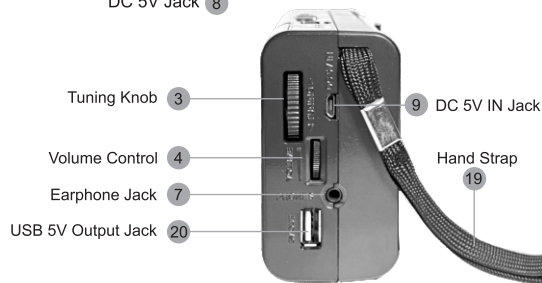 

Operation: How To Use Pagaria R-917 Radio

- CHARGING THE RADIO:** First Charge the Radio for 4-5 hours using the Power Adapter provided with the Radio. Connect the Charging Cable Pin (9) to DC 5V IN and other end of the USB to the USB Charging Adapter. Once radio is correctly powered for charging, the CHARGE INDICATOR (10) will get lit in RED Color. Full charge indicator will NOT be indicated on the Radio anywhere. But 4-5 hours will fully charge the radio. Once charged fully, kindly disconnect the charging cable from radio.
- TURNING THE RADIO ON:** Switch (2) From Off position to any desired FUNCTION, like Bluetooth, FM, AM, SW. To confirm the RADIO is Turned ON, POWER INDICATOR (11) will turn on RED Color.
- BLUETOOTH MODE:** Switch (2) to First FUNCTION, it is Common Switch for BT / MP3 (USB /TF). On Switching to Bluetooth Mode, Speaker will give sound "BLUETOOTH MODE". Now you can search "PAGARIA R-917" on your mobile and PAIR. Once paired you can play desired Music from your mobile wirelessly to this Speaker.
- USB / TF MP3 MODE:** Insert USB/ TF Card upto 32GB in respective Ports. Switch (2) to BT / MP3, the First FUNCTION of the Switch (2). It will read the USB / TF and play the Music. Press PAUSE/PLAY (>II) button to hold the playback, Press it again to continue the playback. Press (<< or >>) button to select the Previous song and Next button to the next song.
- FM/AM / SW RADIO MODE:**
 First Open the Antenna (1) fully. To get best FM Radio reception.
FM MODE: To hear FM Radio, slide the Switch (2) to FM. After slide to FM on FUNCTION Switch. You can tune the Radio with the help of the Tuning Knob (3) to set your desired FM Station.
AM / SW MODE: Same as FM MODE, Slide Switch (2) to AM or SW Mode. Remember to Open the Antenna (1) while using any Radio Mode. Tune the AM or SW by using Tuning Knob (3) for desired Radio Station.
- VOLUME CONTROLLER:** Control Volume from (4) as per your desire for All Modes.
- TORCH ON/OFF:** Switch (5) to turn TORCH ON/OFF.
- EARPHONE PORT:** You can use any 3.5mm Wired Earphone to (7) connect and listen music from Radio or any other Mode.
- EMERGENCY CHARGING OF MOBILE:** Connect Mobile Cable to 5V OUT Port (20) to charge in case of Emergency use. Remember it cannot fully charge the Mobile, but only give temporary charge enough to use for short time.
- TURN OFF THE RADIO SPEAKER:** Slide Switch (2) to OFF which is to extreme left to Turn the RADIO SPEAKER Fully OFF. When you don't want to listen to the radio, please turn it OFF and disconnect the AC power cord or take out the batteries. When you don't want to use the radio for a long time, please take out the batteries from the Radio, to avoid battery drain.
- RADIO SPEAKER CAN EVEN WORK WITHOUT BATTERY ON CHARGE:** If battery is not working or gone bad, you can continue to use the Radio Speaker by giving power connection to it and keeping it powered on 5V-DC Adapter.